


# MG984G-30M MG983G-30M MG984G-A user manual

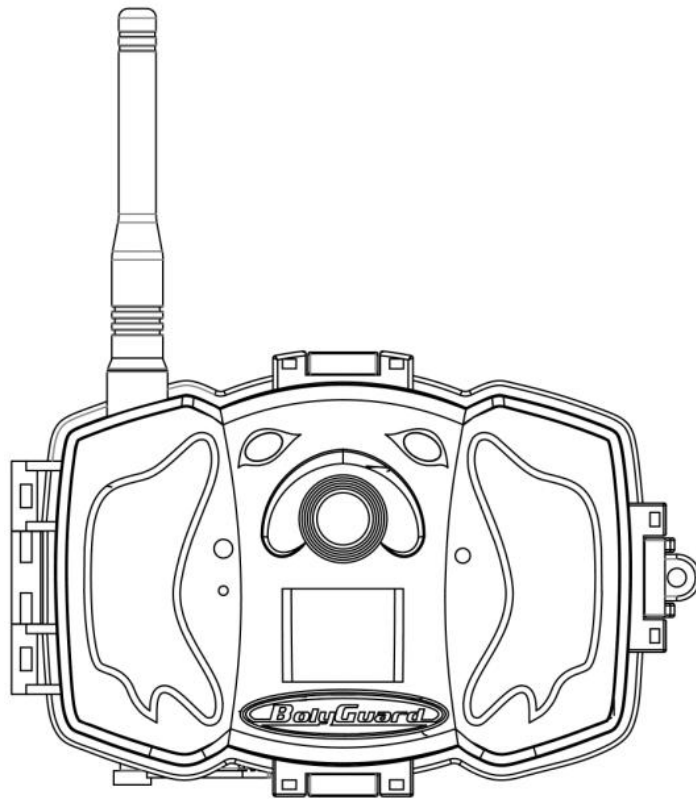





## Table of Contents

1. Getting Started.....	1
2. Camera Operations.....	3
2.1 Batteries / Power Supply.....	3
2.2 SD Card Information.....	3
2.3 SIM Card Information.....	4
2.4 Camera Modes.....	5
2.5 Manual Image / Video Capturing.....	6
2.6 Manage Images and/or Videos.....	6
2.7 Sending Images via MMS or GPRS.....	6
2.8 Trigger Modes.....	8
2.9 Laser Pointer.....	9
3. Camera Setup Settings & Display.....	10
3.1 Settings Interface & Display.....	10
3.2 Mobile Communication.....	11
3.3 Camera Setup Software.....	12
3.4 Mobile Applications.....	14
3.4.1 Changing settings via Android APP.....	15
3.4.2 BG Tools Usage Instructions.....	16
3.5 Use the Remote Control.....	20
3.6 Load or Remove a Wireless Sensor.....	21
3.7 Camera Setup Options.....	24
4. Detection Ranges – PIR Detection Zones.....	30
5. Technical Specifications.....	32

# 1. Getting Started

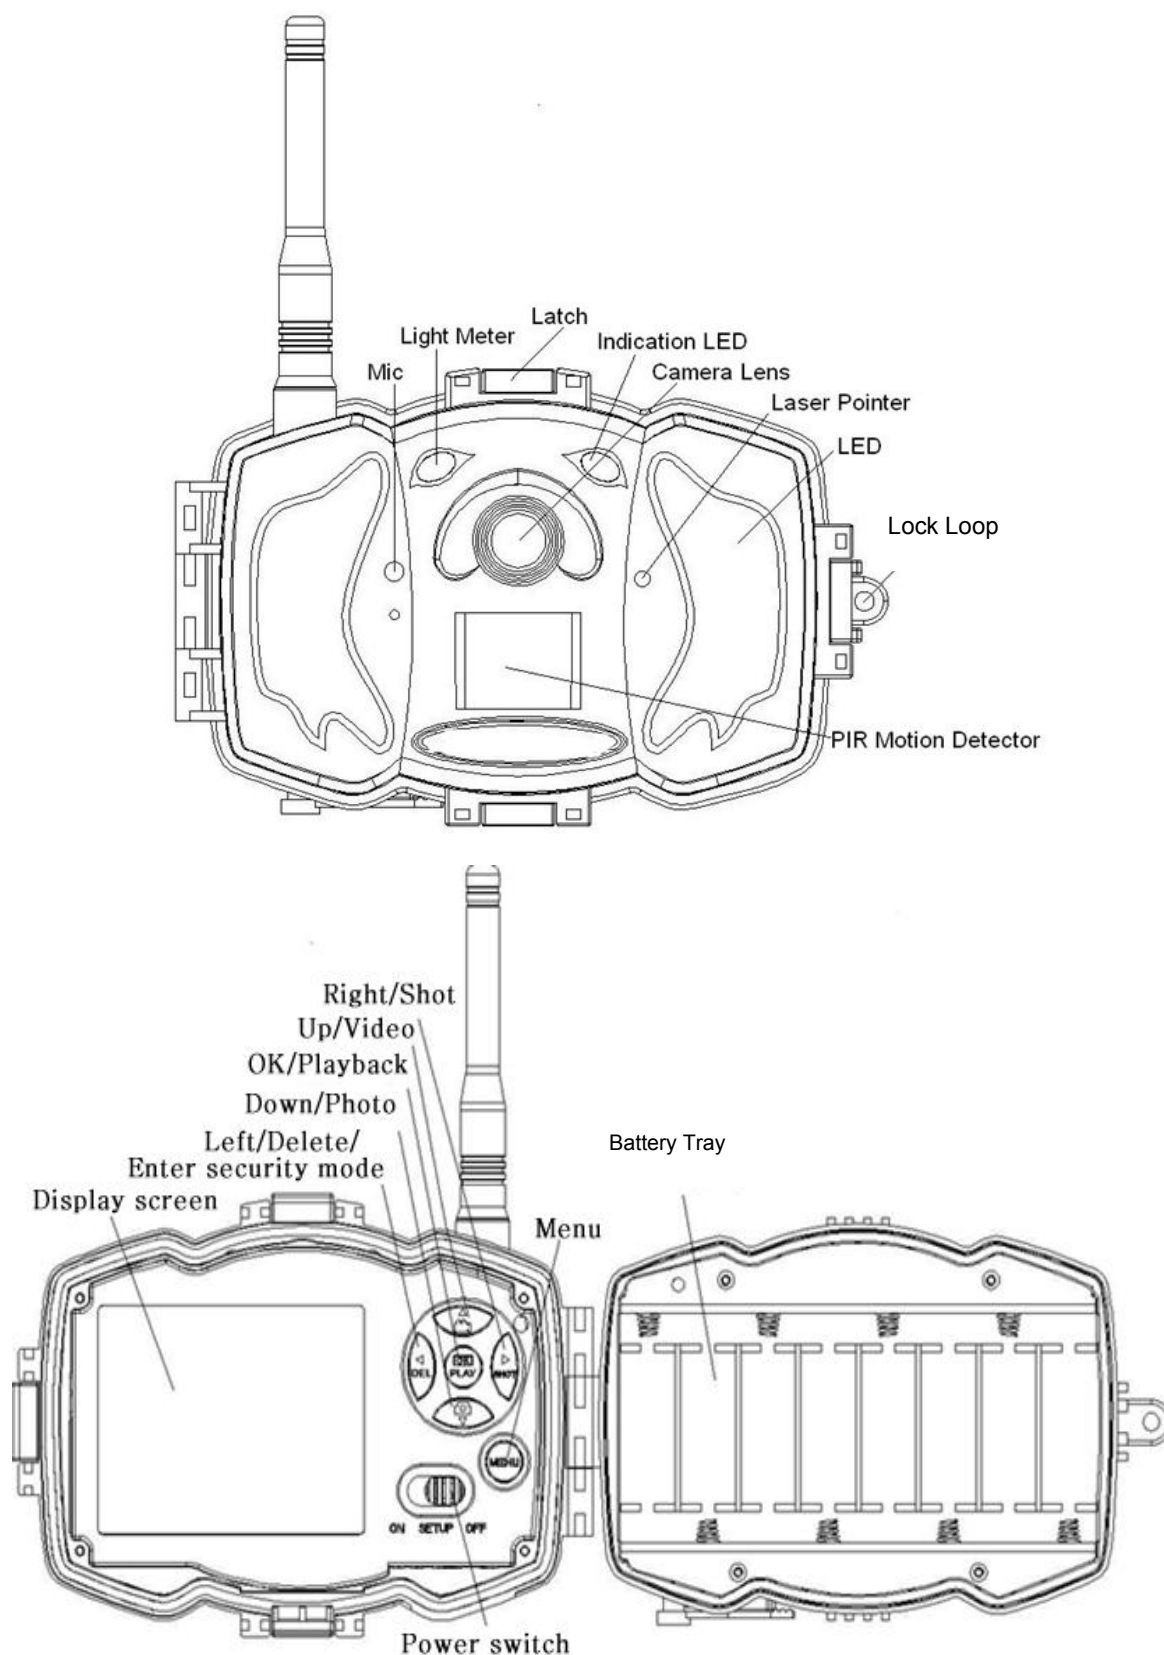

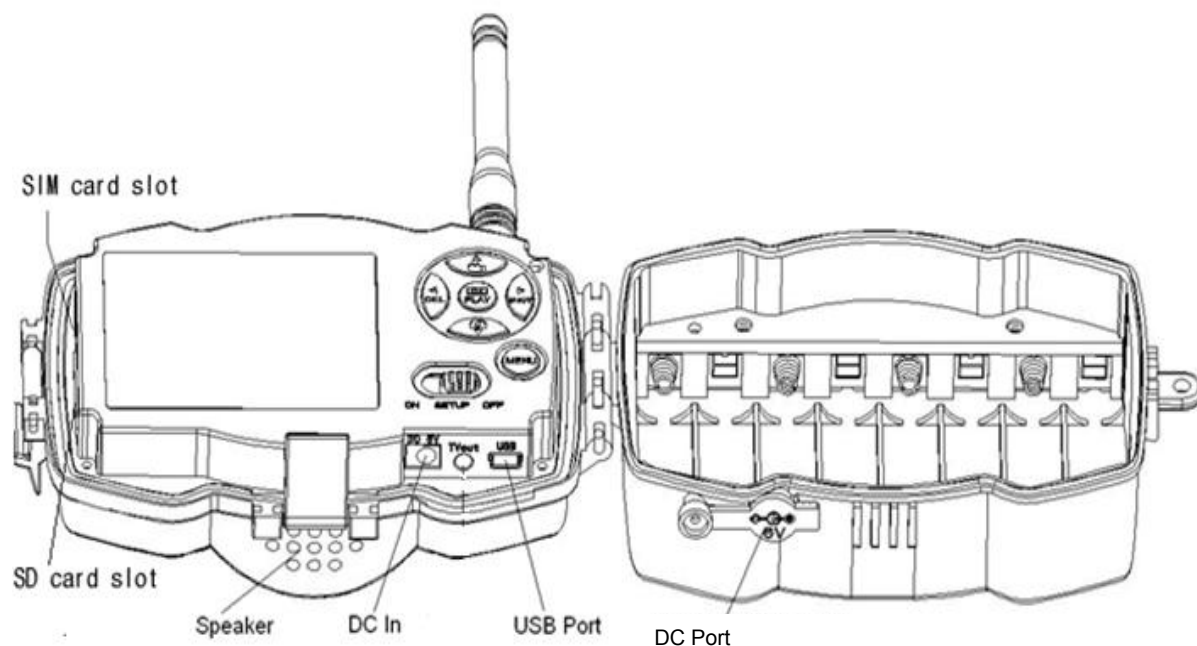

This camera, a digital scouting camera with communication function, is a digital infrared surveillance camera, triggered by any movement of human or animal monitored by a high sensitive Passive Infrared (PIR) motion sensor, and then automatically captures high quality pictures (up to 30M pixels) or records video clips (1080 FHD). It sends picture instantly to your mobile device or video (less than 10M) to your e-mail via GPRS network. The MG984G-A can only send pictures to your e-mail via GPRS network.

You'll be alerted just when the camera is triggered or per custom settings. It takes color pictures or videos under sufficient daylight. While at night, the built-in infrared LEDs can help to take clear pictures or videos.

When mounting the camera outdoors, use the strap that was included with the camera. Periodically clean the camera lens and PIR sensor to avoid dust build up that can reduce picture quality and check to make sure the mounting strap is not loose.

## 2. Camera Operations

### 2.1 Batteries / Power Supply

The camera is powered by four or eight AA batteries - High-density, high-performance alkaline, rechargeable Alkaline or NiMH batteries are recommended. When the batteries are low, the camera will beep twice and automatically shut down.

A DC 6-Volt, 2 Amp external power supply adapter can also be used to power the camera (not included).

### 2.2 SD Card Information

To take full advantage of the latest technologies, we recommend Class 10 SD cards or better, which have fast transfer speeds and long durability for extensive shooting in the most extreme outdoor conditions. Secure Digital High Capacity (SDHC) PRO cards work with SDHC compatible devices only. Please check that your product is compatible with SDHC cards.

- **Insert the SD card into the camera before turning on the camera**

This camera supports up to a 32GB capacity SD card and has no built-in internal memory. The camera will not function without the SD card properly inserted into the camera.

- **Make sure the SD card is unlocked before inserting the SD card into the camera**

The camera will operate normally with a locked SD card inserted, but the card will not be able to store captured images or videos taken by the camera.

- **Do not remove the SD card while the camera is on**

By removing the SD card while the camera is on risks damaging the internal components of the camera.

- **If you experience any problems with an inserted SD card**

Try reformatting the SD card, utilizing the camera's main settings option.

## 2.3 SIM Card Information

- **Insert the SIM card into the camera before turning on the camera**

The camera SIM slot is sized for a standard SIM card. If you have a nano or micro size SIM card, utilizing a SIM card adapter (included with most of our cameras) will be required to connect your camera to the cellular network.

Note: The camera will still function without a SIM card. The SIM card is needed only for the wireless/cellular capabilities.



## 2.4 Camera Modes

The different modes are accessed by sliding the power switch to the different positions marked on the camera:

- **OFF Mode**

Turns the camera off. The camera will still consume a small amount of power while in OFF mode. It is recommended to remove the batteries if the camera will not be used for a long period of time.

- **TEST/SETUP Mode**

Customize the camera settings, or play back pictures and videos the camera has taken on the LCD display.

- **ON Mode [ Hunting Mode ]**


Camera will take pictures or video when motion is detected and/or at specific time intervals, according to the programmed settings. After switching the camera to the ON position, the motion indicator LED (red) will blink for about 10 seconds and then turn off. This preset time allows you to adjust the cameras position if needed, before the camera becomes active.

- **Security Mode(Only for MG983G-30M)**

similar to hunting mode, but needs more power to supply. So it's suitable for indoor use and needs to use the power adapter.

Only in security mode you can use the remote control to easily arm or disarm.

If the power switch is in ON position and the Security Mode Is ON, you need to press the left key to enter security mode quickly or wait for

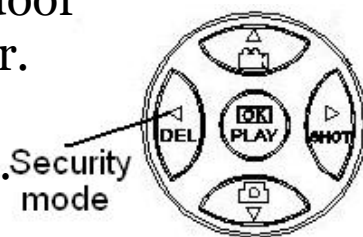



about two minutes till there is an “A” instead of “S” on the display screen. Then the camera will work in Security Mode.

## 2.5 Manual Image / Video Capturing

Place the camera in TEST/SETUP mode and press “▶/SHOT” to manually capture photos or record video. Press “▶/SHOT” again to stop capturing video.

## 2.6 Manage Images and/or Videos

Place the camera in TEST/SETUP mode and press “OK/Play” on the remote to view images or videos. The latest image or video will be shown on the LCD screen.

- **To view:**

Press ▲ or ▼ to view the previous or next image or video. Press OK to start a video.

- **To delete:**

Press OK on the remote in Test/Setup Mode to access the pictures and videos. Press the MENU key to enter into Playback mode. Press the ▲ or ▼ keys to find the Delete option. Press OK when the Del One option is selected. Press OK again to confirm you want to delete the picture or video.

## 2.7 Sending Images via MMS or GPRS

Images can be sent directly to your wireless device or email, based on the Send Mode settings. Email and

wireless device information need to be set up while the camera is in TEST/SETUP Mode. Images can only be sent when a correctly setup SIM card is recognized, installed and the wireless signal strength is adequate.

You have the options of email MMS, email GPRS, Phone MMS in the internet tab of the camera settings. Videos will not send due to the size of video files and limitations set by the SIM card carrier.

### **To manually send a photo:**

- Put the camera in TEST/SETUP mode
- Wait for the camera to acquire a network signal and the SIM card to be recognized
- ✕ indicates the SIM card is recognized by the camera.
- ⬆ indicates the SIM card is not recognized by the camera or the SIM card is not working due to connection/activation issues.
- Take a manual photo by pressing the SHOT button or press OK to view the photos stored on the camera
- Find the picture you want to manually send
- Press the MENU button to pull up the Send To: option that is currently set in the camera settings
- Press OK again to send the picture

Send Mode settings will dictate how often you want pictures sent to you and the options “Daily Report” and “Instant” will only be active when the camera is in the ON mode. You can find more detailed information on the Send Mode options in the proceeding *Command List* section.

## 2.8 Trigger Modes

There are 3 different trigger modes for the camera: PIR Trigger/Sensitivity, Time Lapse, and a combined PIR/Time Lapse mode. These modes are activated by three different menu options (PIR Trigger/Sensitivity, PIR Interval, and Time Lapse).

- **PIR Trigger/Sensitivity**

The camera will activate when motion is detected. If the PIR Trigger/Sensitivity option is set to OFF, the camera will not respond to any motion within the camera's range.

- **Time Lapse**

The camera will activate at the set time interval regardless of motion detection. If the Time Lapse option is set to OFF, this trigger function will be disabled.

- **Combined PIR/Time Lapse**

For the combination of both PIR and Lapse triggering, the following settings must be set correctly:

- PIR Trigger/Sensitivity must NOT be set to OFF
- The Time Lapse interval must be set to a non-zero value.

The camera will capture pictures or video when motion is detected and at the preset time, regardless of motion detection.

## **Additional PIR settings to note:**

- **PIR Interval**

This setting indicates how long the PIR sensor will be disabled after each camera triggering. During this interval time, the camera will not react to any detected motion or activate at the scheduled Time Lapse interval.

Further detailed information about the trigger modes can be found in *Camera Setup Options* section of the manual.

## **2.9 Laser Pointer**

The laser light pointer beam can be activated to assist in the camera's positioning by pressing ◀ in SETUP mode.

*NOTE: Do not point the laser at people – The laser can cause physical harm, if shined into eyes.*

## 3. Camera Setup Settings & Display

The remote control is required for initial setup and changing any camera settings. When powering on the camera, please allow 10-20 seconds for the camera to recognize the remote. An icon on the LCD screen will appear once the camera has recognized the remote. The maximum detectable range for the remote is 30 feet. The remote will not work properly without the antenna attached to the camera.

### 3.1 Settings Interface & Display

To update the camera settings, place the power switch to the TEST/SETUP position.

To navigate the menus, utilize the following built-in buttons:

**MENU:** Enter the program menu in Preview Mode


**▲▼▶◀** : Selecting menu options

**OK / PLAY:** Save parameter settings and play videos

**DEL / ◀:** to delete an image or video

**SHOT / ▶:** Capture a photo or record a video manually


When the camera is in TEST/SETUP Mode, the screen will activate and display the following:

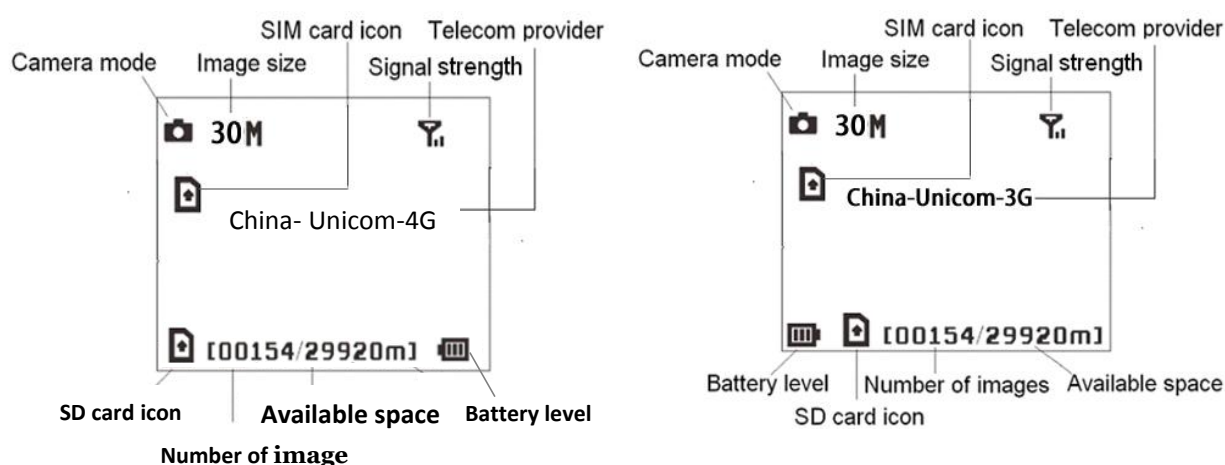

MG984G-30M/MG984G-A

MG983G-30M

 indicates the SIM card is recognized by the camera.

 indicates the SIM card is not recognized by the camera or the SIM card is not working due to connection/activation issues.

## 3.2 Mobile Communication

The camera can receive and respond to commands sent via SMS, MMS, GRPS and the Apple or Android application, as long as the camera is correctly connected to a wireless carrier.

To enable the SMS functionality using the mobile application, complete the following steps:

- Place the camera in Test/Setup Mode and go into the menu Setup options
- Set SMS control to ON

For MMS and GPRS functionality, the following menu Setup options will need to be set:

- MMS network settings (varies depending on carrier)
- GPRS network settings (varies depending on carrier)
- Send to Phone option (MMS or GPRS)

The settings for the network options vary between service providers. You will need to contact your SIM service provider for specifics on these settings.

### 3.3 Camera Setup Software

For easier camera setup, download the camera setup application (BMC\_config.zip), along with the basic instructions from our website(<http://www.bolyinc.com/>). In summary.

**STEP 1:** Open the software and select camera mode:






STEP 1: Select your country and carrier.

STEP 2: Choose between default or manual settings. For first time use, we suggest using the default settings.

STEP 3: Input the phone number of the phone to receive/send the remote commands and images in the “administrator number” field and email address in “Receive Email 1” field (This is NOT the phone number of the inserted SIM card that resides in the camera).

STEP 4: Save the .txt file in the GSM folder of SD card after all settings are complete.

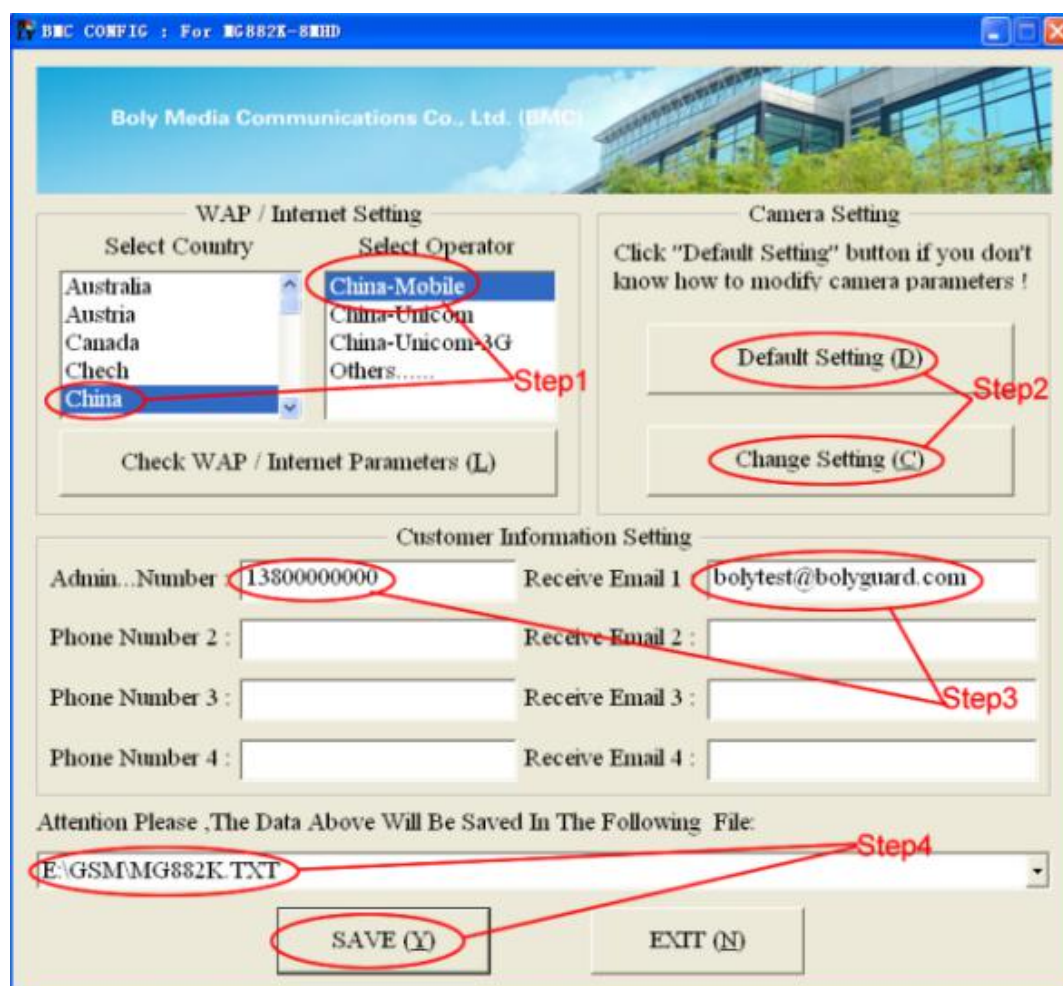

BMC CONFIG : For MG882K-8MHD

Boly Media Communications Co., Ltd. (BMC)

**WAP / Internet Setting**

Select Country: Australia, Austria, Canada, Czech, **China**

Select Operator: **China-Mobile**, China-Unicom, China-Unicom-3G, Others.....

Check WAP / Internet Parameters (L)

**Camera Setting**

Click "Default Setting" button if you don't know how to modify camera parameters !

Default Setting (D)

Change Setting (C)

**Customer Information Setting**

Admin..Number: 13800000000

Receive Email 1: bolytest@bolyguard.com

Phone Number 2 :

Receive Email 2 :

Phone Number 3 :

Receive Email 3 :

Phone Number 4 :

Receive Email 4 :

Attention Please ,The Data Above Will Be Saved In The Following File:

E:\GSM\MG882K.TXT

SAVE (Y)

EXIT (N)

If your country or SIM card provider is not listed, select “Others”. You will need to ask the SIM card provider for their specific MMS URL, MMS APN, Port, MMS IP, Account, Password, GPRS APN, GPRS account, GPRS password. For email sending, your email service provider will be able to provide the send email server and port settings.

Note: Once the SD card is inserted into the camera and the camera is turned on, this file will automatically be uploaded to the camera and be deleted from the SD card.

### **3.4 Mobile Applications**

When the camera is switched to the ON mode, you can change some of the basic camera settings through the mobile application. There are currently apps supported by Android and Apple devices. Charges or fees may be incurred through your cellular provider when sending text messages to the camera.

- For Android, you can download the application directly from our website, under the *Downloads* section.(<http://www.bolyinc.com/>)
- For Apple, search BGTools in the official Apple Apps store.

### 3.4.1 Changing settings via Android APP

Basic settings can be changed through the Android app.

There are two user authorization levels for this feature: administrator and normal users.


Functions	User Level
Set administrator phone number	Only administrator's password
Set administrator's password	administrator
Set camera parameters	administrator
Set normal user	administrator
Receive emergency calling	administrator, normal user
Send SMS for on spot picture	administrator
Receive MMS when triggered	administrator, normal user
Check camera status	administrator, normal user
Get help information	administrator, normal user

It's easy to use the Android APP to communicate with the camera. Select the camera in the application that you would like to access. Setting and camera command options will be under the COMMON tab of the application.


### 3.4.2 BG Tools Usage Instructions

STEP 1: Open the BG Tools app, click on the icon  add a new device.

STEP 2: ① Input a name for you camera ② Input your SIM card number which is inserted in your camera. ③ Choose your camera model number, then click "Add".

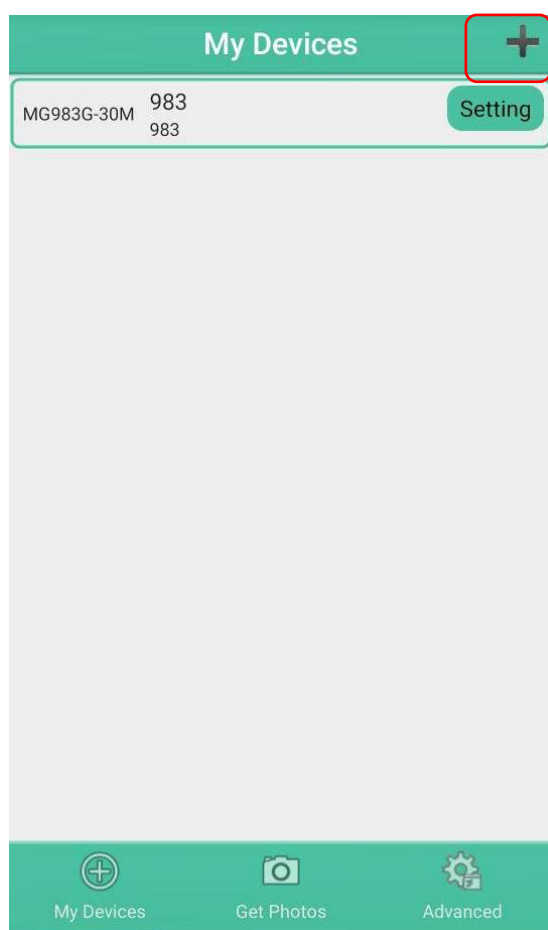


STEP 1

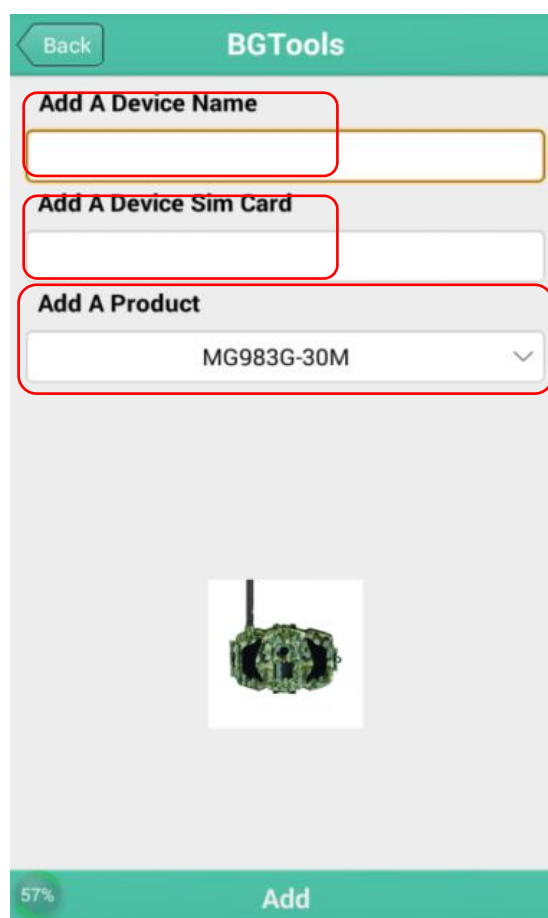


STEP 2

**STEP 3:** Set super user number and password. For the first time use the super user password is 0518.(The Super User number is the SIM card number which is inserted in your mobile phone).

**STEP 4:**In the step 3 Click”send”,then choose the country and provider according to your SIM card. Then Click”Check WAP/Internet Parameters” to check whether you have all parameters filled in. The”User name and User Password“ is your MMS name and password.

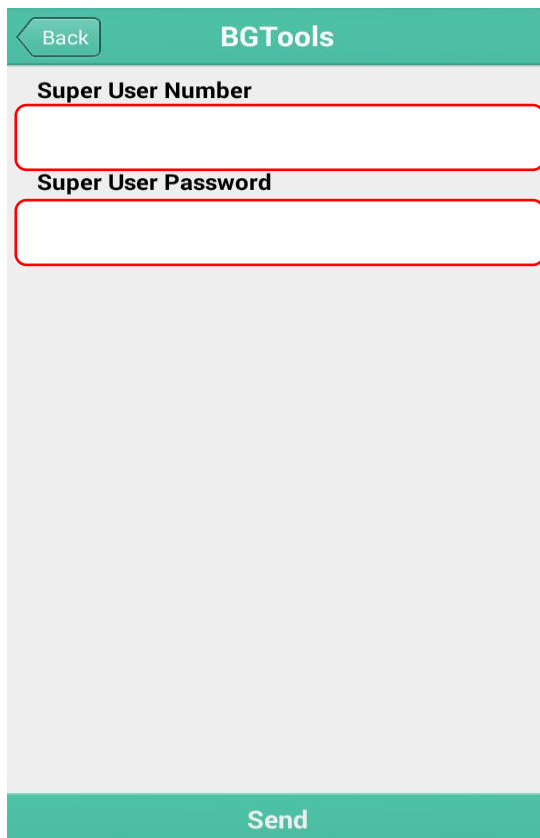


STEP 3

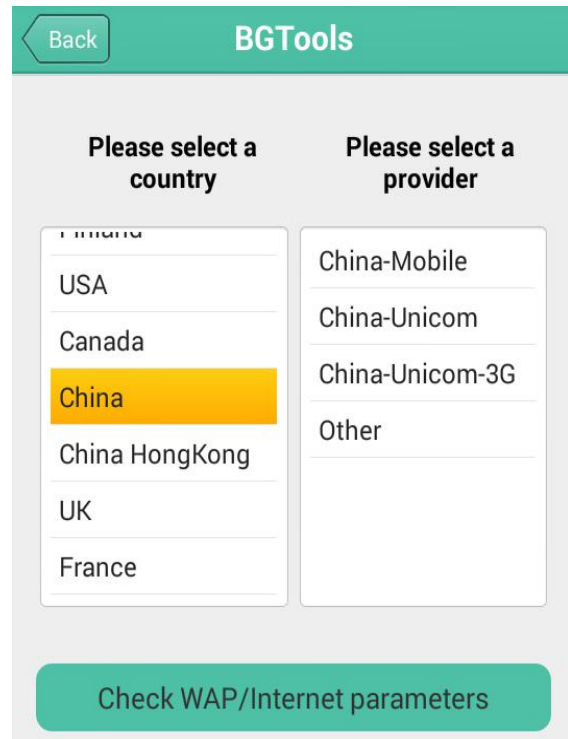


STEP 4

STEP 5: Select Mail Server: Boly Email or Other Email.  
Select "my device" you can add or delete a device.  
STEP 6: Select "Setting" to set users parameters or set to default.

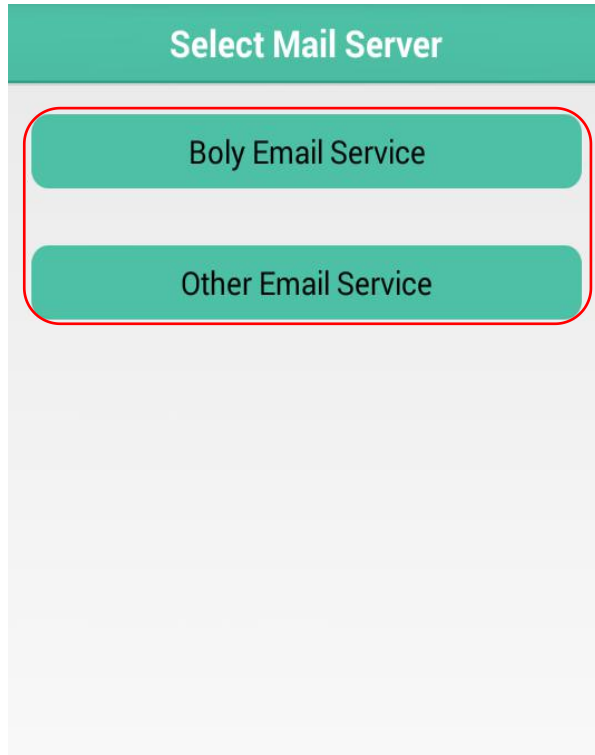

STEP 5

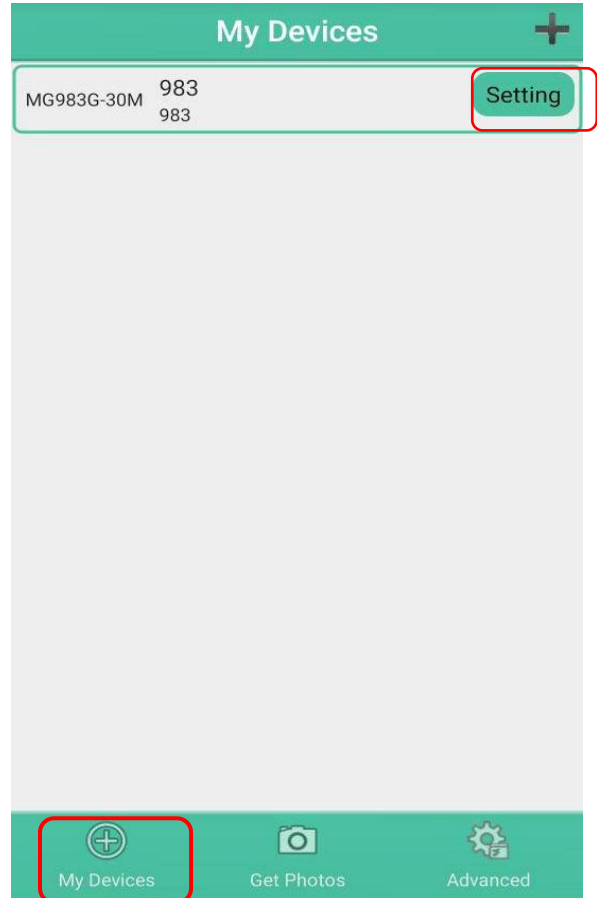

STEP 6

STEP 7: Select "Get Photos" means you can get a photo from your camera device. There are two ways:  
**Cellphone:** Send MMS to phone  
**Email :** Send to email by GPRS.


STEP 8: Select "Advanced" to set Super user information change password, Format SD card, System Checking, Arming, Disarming. View the Version.

## Set password:


Set a new super user password If you forget it.

## Super User information:

Change your super user and password

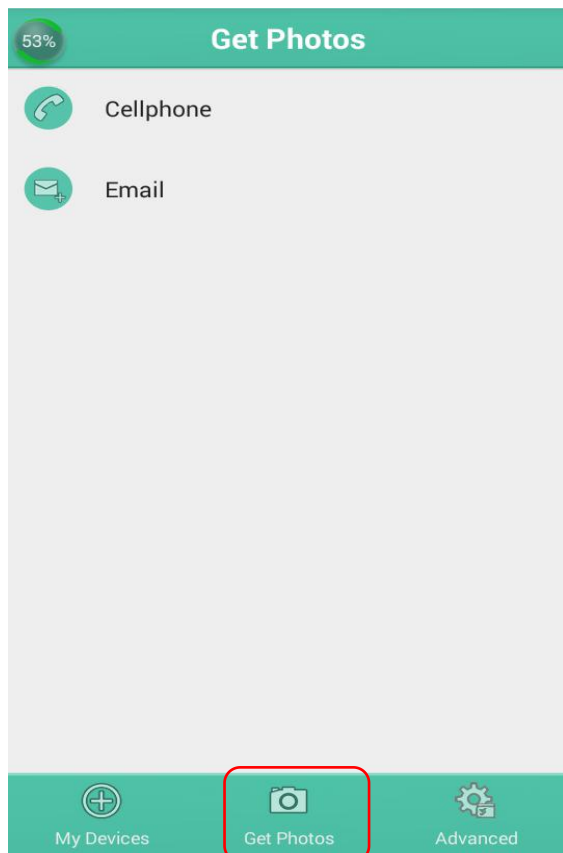

STEP 7

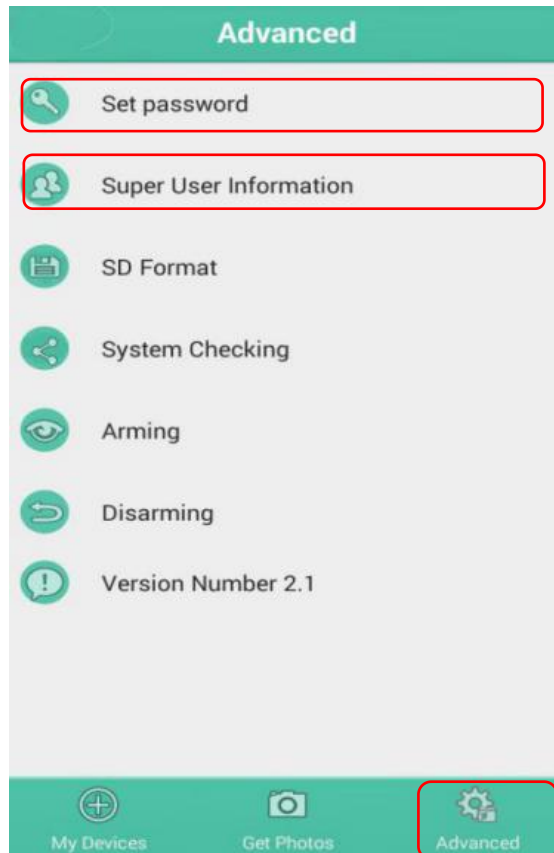

STEP 8



## 3.5 Use the Remote Control



When it's in **Security Mode**, you can use the remote control to easily arm (button A) or disarm (button D). Also you can dial the emergency numbers via button C in case of emergency. Press button B to open or close the laser (you can easily mount the camera with the help of the laser pointer).

Button A: Arm the camera


Button D: Disarm the camera

Button C: Emergency call button


Button B: Laser pointer

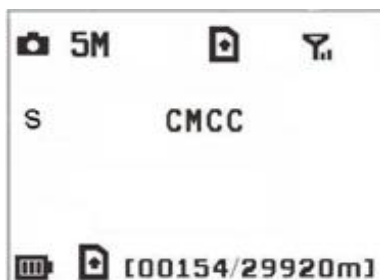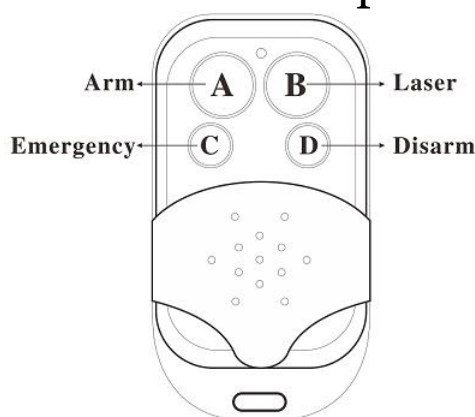

Setup status

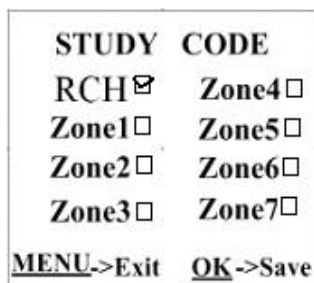

Study Code Menu

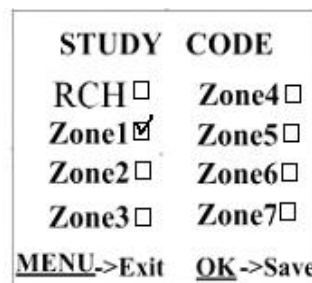

Study Code Menu

Method to add remote control(s) to the camera:

Set Security Mode as On, Enter the Setup status, press Menu and enter the Study Code submenu. Choose "RCH," press OK button, then press button A of the remote control . When it's successful, there will be a "√" before RCH.

Note, it has not entered Security mode even you set security mode as on, you need to press the left key to enter security mode quickly or wait for about two minutes till there is an "A" instead of "S" on the display screen.

## 3.6 Load or Remove a Wireless Sensor

We support three customized kinds of 433MHZ sensors, infrared body sensor, wireless door magnet and wireless smoke detector that can be set as an alarm sensor of the camera.

Method to load or remove a wireless sensor:

1. Power on the wireless sensor.

2. Enter the Setup status, press Menu and enter into the Study Code submenu. Choose a zone, for example Zone1, press OK button, then trigger the wireless sensor to check if the sensor is loaded successfully. When it's successful, there will be a "√" after the zone number.


For example, to load a infrared body sensor :

1. Choose a zone to start study code;

2. Power on and trigger the wireless sensor;

3. When you want to remove the wireless sensor, please enter the study code menu, press “◀” or “▶” button to cancel the “√.”



Please note that the wireless sensors just can be used in **Security Mode**. In Hunting Mode, the wireless sensors will not function.

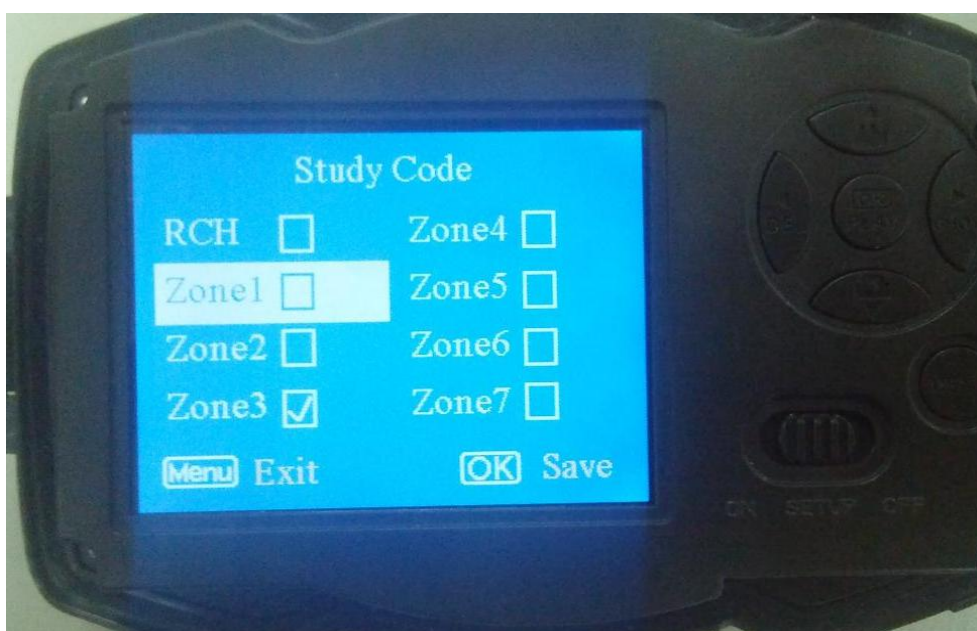





Press the button for 3 seconds to study code

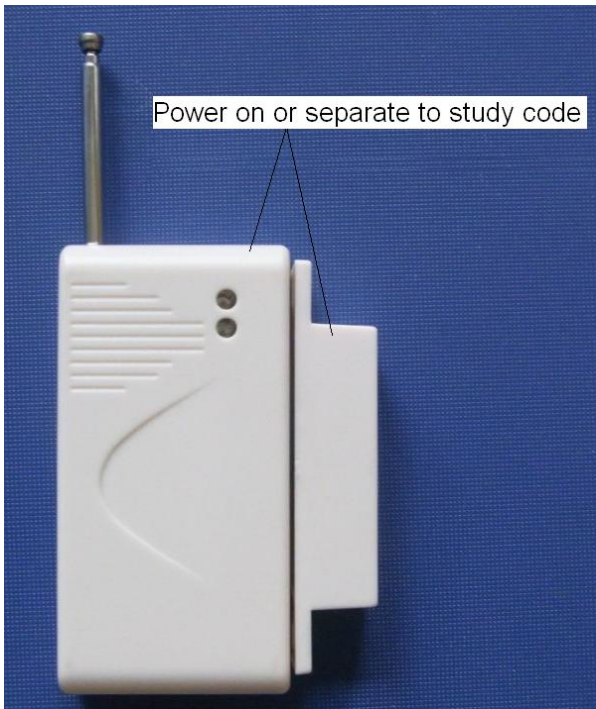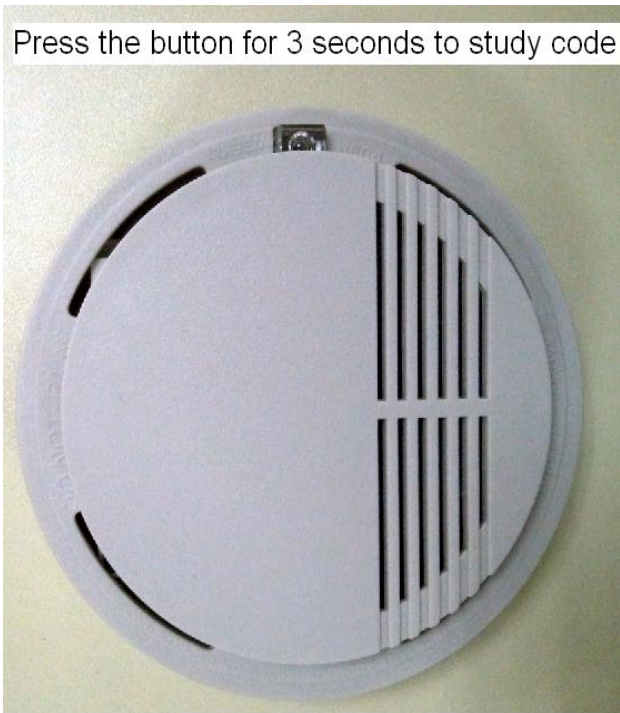

## 3.7 Camera Setup Options

To view the camera settings menu, slide the power switch to TEST/SETUP mode and press MENU on the remote. Use ▲ or ▼ keys to select the sub-menu. Use ◀ or ▶ keys to select the different options. Press “OK” to save the settings.

**After changing EACH setting in the Setup menu, you must press OK or the camera will retain the previous setting.**

*Dependent on the model and firmware version, not all Menu options may be available on your specific camera. The menu options with \* means it is not supported by MG984G-A.*

Menu Options	Descriptions
<b>Basic Settings</b>	
<b>Camera Mode</b>	Choose between capturing images, videos or both at the same time: Photo, Video, Pic+Video <b>Default: Photo</b>
<b>Security Mode</b>	To set if you will use security mode. Security mode is suitable for indoor use. You need to use the power adapter to power supply. The battery can be just a backup for emergency use. Otherwise, the battery will be quickly consumed. The remote control is available only when Security Mode is ON. <b>Note keep the switch at SETUP position to enter into security mode.(only for MG983G-30M)</b>
<b>Photo Size</b>	Choose the image size: 14MP, 20MP, or 30MP (mega pixel) options are available. <b>Default: 30 MP</b>

<b>Video Size</b>	Choose the video size: 1920x1080, 1280x720 or 640x480. <b>Default: 1920x1080</b>
<b>Photo Burst</b>	Choose the number of photos taken after the camera is triggered: 1 Photo, 2 Photo, or 3 Photo,4 Photo,5 Photo. <i>If Pic+Video is selected, Photo burst defaults to 1 photo, regardless of entered value.</i> <b>Default: 1 Photo</b>
<b>Video Length</b>	Choose the duration of the video recording: Valid values extend from 5 to 180 seconds with a one second delay. Press ◀ and ▶ keys to decrease or increase the video length. <b>Default: 10 seconds</b>
<b>Clock Settings</b>	
<b>Set Clock</b>	Set the cameras date and time. The date format is month/day/year. The time format is hour: minute: second. The valid values for the year is between 2016 and 2050 .
<b>Time Lapse</b>	The camera can capture images or videos at a preset time interval regardless of motion detection. Changing this setting to a non-zero value turns on Time Lapse mode and the camera will take photos at the set interval time – Values range from 5 minutes to a maximum of 8 hours. <i>If PIR Trigger/Sensitivity and Time Lapse options are BOTH OFF, the camera will not capture any photos or videos.</i> <b>Default:OFF</b>
<b>PIR Trigger/ Sensitivity</b>	This setting is for the sensitivity of the PIR sensor. There are four sensitivity parameters: High, Normal, Low and Off. It is recommended to use HIGH sensitivity in areas with little environmental interference and also for warmer, humid temperatures or climates. Use LOW sensitivity for areas that have a lot of interference. The sensitivity of the PIR is effected

	<p>by temperature. Higher temperatures leads to lower sensitivity.</p> <p><i>If PIR Trigger/Sensitivity and Time Lapse options are BOTH OFF, the camera will not capture any photos or videos.</i></p> <p><b>Default: Normal</b></p>
<b>PIR Interval</b>	<p>This setting indicates how long the PIR sensor will be disabled after each camera triggering. During this time the PIR sensor will not react to any detected motion or scheduled timer functions. The PIR Interval can be set between zero seconds to a maximum of 1 hour. Press LEFT or RIGHT to decrease or increase the desired PIR Interval time.</p> <p><b>Default: 5 seconds</b></p>
<b>Work Day</b>	<p>Choose the days of the week you want the camera to work.</p> <p><i>This setting is only available in Hunting Mode.</i></p> <p><b>Default: All</b></p>
<b>Working Hour</b>	<p>This setting allows the camera to be active only during the set period of time per day. If activated, the camera will NOT take pictures or video outside of the specified working hour, regardless of any other setup option settings. The values are set to military time that range from 00:00 to 23:59.</p> <p><b>Default: OFF</b></p>
<b>Send settings</b>	
<b>Send To</b>	<p>Send the image to your phone or email options.</p> <ul style="list-style-type: none"> <li>• Phone [MMS]: Send the image to cellular device via WAP.</li> <li>• Email [MMS]: Send the image to email address via WAP.</li> <li>• Email [GPRS]: Send the image to email address via SMTP.</li> </ul> <p><b>Default: Email [GPRS]</b></p>




<p><b>*Phone MMS</b></p>	<p>The camera sends images to mobile phone. Required MMS settings: URL, APN, IP and Port,Account,Password.Contact your cellular or network service provider if you are not familiar with the settings.</p> <p><b>“Phone1-Phone4”</b> means the receiving phone number.</p>
<p><b>*Email MMS</b></p>	<p>The camera sends image to email address via WAP.Required MMS settings: URL, APN,Account,Password, IP and Port. Contact your cellular service provider if you are not familiar with these settings.</p> <p><b>“Email1-Email4”</b>means the receiving Email address</p>
<p><b>Email GPRS</b></p>	<p>The camera sends image to email address via GPRS network with SMTP protocol. Required GPRS settings: APN,Account Password, Server,Port,Ssl.Contact your cellular or network service provider if you are not familiar with the settings.</p> <p><b>“Email User and Email password ”</b> means the sending email address and password.</p> <p><b>“Email1-Email4”</b> means the receiving Email address.</p>
<p><b>Send Mode</b></p>	<p>There are 4 options for this setting.</p> <ul style="list-style-type: none"> <li>● <b>Manual:</b>(For MG983G-30M) Choose “Manual” in SETUP mode. Please ensure a SIM card is inserted properly. Video information can’t be sent in SETUP mode when you choose Phone MMS; but you can send photos or videos( less than 10M) when you choose Email GPRS.</li> <li>● <b>Daily</b> : Only works in ON mode. This setting will send summarized information and the last picture taken per day. If set in</li> </ul>

	<p>Video Mode, the summarized information will include how many videos were taken.</p> <ul style="list-style-type: none"> <li>• <b>Instant:</b> Only works in ON mode. The camera will send a message instantly after it captures a photo or video.</li> <li>• <b>OFF:</b> Disable all communication functions.</li> </ul> <p><i>Please Note: Some cellular carriers limit the size of files being sent. Some image and video files may be too large to send.</i></p> <p><b>Default: Instant</b></p>
<b>SMS Control</b>	<p>SMS Control enables mobile communication functionality. When SMS Control to ON, the camera can receive and respond to your SMS commands.</p> <p><b>Default: On</b></p>
<b>Attachment Size</b>	<p>Setting the picture size which will be sent to your phone or email. There are 3 options for this setting.</p> <p><b>Low:</b> Send severely compressed picture.</p> <p><b>Normal:</b> Send slightly compressed picture.</p> <p><b>*High:</b> Send the original pictures.</p> <p><b>Default:Low</b></p>
<b>Others</b>	
<b>Study Code</b>	<p>It means to pair the camera with a specified 433MHz wireless device, such as PIR sensor, wireless door magnet, wireless smoke detector, etc. The specified wireless sensor can be set as part of the alarm system. All device should be paired with this camera first. Please see following chapters to find the method to connect or remove a wireless sensor.</p> <p><b>Please note this item is available only in Security Mode.(only for MG983G-30M)</b></p>
<b>Language</b>	<p>Choose the language you prefer. Language options include: English, suomi, Deutsch, Svenskt, Dansk, Norsk, Czech, Russian,</p>

	Italiano, French. <b>Default: English</b>
<b>Beep Sound</b>	Enable or disable the sound the camera will make while navigating the menu settings. <b>Default: On</b>
<b>Camera Position</b>	Used for multiple cameras in an area. You can set an A-Z indicator for each of your cameras in order to distinguish between which photos are from a specific camera. <b>Default: OFF</b>
<b>Game Call</b>	This allows the camera to play an audio file at preset times - The audio file must be saved in the directory of \DCIM\100BMCIM\ with the name <b>IMAG0001.WAV</b> .You must delete the IMAG0001.jpg from your SD card. <b>Default:ON</b>
<b>Format SD</b>	All information on the SD card will be deleted. Make sure that you have made a backup of important data already on the SD card.
<b>Default Settings</b>	Restore all settings back to the default values.
<b>Version</b>	Shows firmware and IMEI (International Mobile Equipment Identity) information of the camera.

## 4. Detection Ranges – PIR Detection Zones

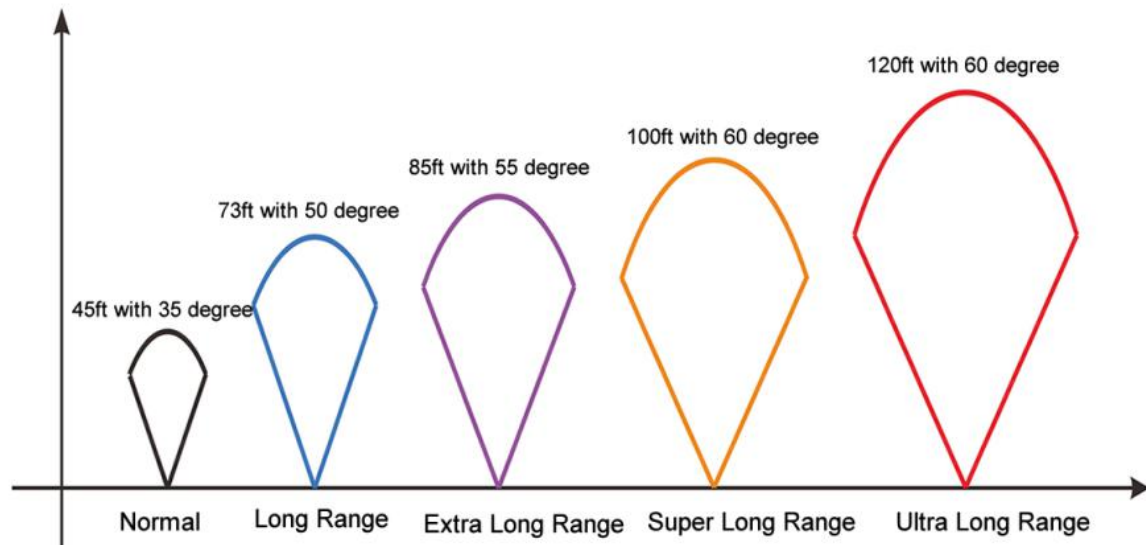


A passive infrared sensor (PIR sensor) is an electronic sensor that measures infrared (IR) light radiating from objects in its field of view. PIR Angle refers to the degree that the sensor can sense movement.

Cameras that have a large PIR Angle can detect movement over larger areas and have a better chance of capturing the subject in the center of the frame as opposed to the edges like some lower quality cameras do. The longer the distance that the camera can sense, the more area that is detectable and the more opportunities the camera will have to capture that perfect picture.

In Boly cameras, the PIR Angle is slightly smaller than the camera's field of view angle. This feature is inherent in our camera designs without reducing the overall possible detection area, due to our patented technology that enhances increased sensor angles and lengthens trigger distance. By making the PIR Angle slightly less than the camera's field of view, we have reduced empty pictures rates and helped assure that the entire subject is captured within the photos and videos.

With our patented sensor technology, we have increased the camera's effectiveness over standard PIR cameras to assure that all detectable motion is captured. Combined with our patented BolyRaw image processing technology, we are confident that the images captured are of the highest quality that you can display and enjoy for years to come.

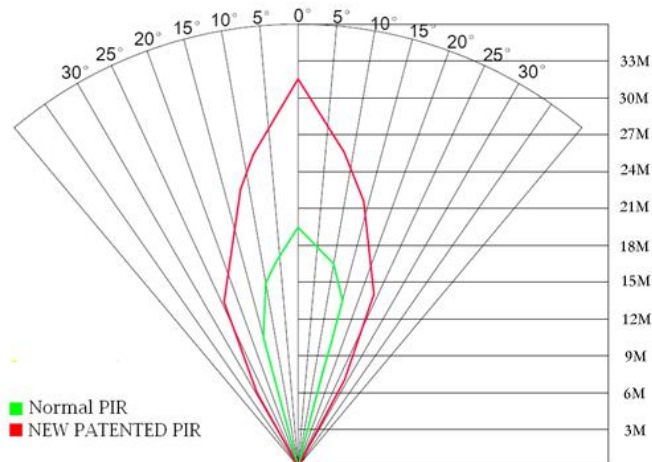

## 5. Technical Specifications

	MG984G-30M/MG984G-A	MG983G-30M
Picture Resolution	14/20/30 MP	14/20/30 MP
Video Length	5 to 180 sec	5 to 180 sec
Detection Range	100ft.	100ft.
Illumination Distance	90ft.	90ft.
Image Sensor	14MP Color CMOS	14MP Color CMOS
Aperture	f/ 2.4	f/ 2.4
Field of View	60 degrees	60 degrees
Trigger Time	< 1.0 sec	< 1.0 sec
Memory Card	32GB max	32GB max
Display Screen	Built-In 3" LCD	Built-In 3" LCD
Sound Recording	Yes	Yes
Operating Ambient Temperature	-20 degrees to + 60 degrees C	
Non-Operating Temperature	-30 degrees to + 70 degrees C	
Relative Humidity	5% to 90% noncondensing	
Dimensions	147x96x79 mm	147x96x79 mm
Unit Weight	~ 0.30kg	~ 0.30kg
Power Supply	4 or 8AA batteries or 6V, 2A external power supply	
Standby Power Consumption	<0.3mA(<7mAh/Day)	<0.3mA(<7mAh/Day)
Compliances	FCC, CE, RoHS	FCC, CE, RoHS

\* When Camera Mode is set to Pic+Video, Photo Burst option automatically disables, resulting in only one picture captured along with the video. When Camera Mode is set to Photo, Photo burst option will operate normally as specified.

*Boly Inc is constantly involved in development, engineering, and production – Accordingly, we reserve the right to modify, at any time, any product, product specification and data without notice to improve reliability, function, design or otherwise. The information contained herein is based on tests and data that Boly Inc. believes to be reliable, but the accuracy or completeness is not guaranteed. No warranty of any kind is made with respect to any of the above representations. No reproduction, copy or use thereof may be made without the express written consent of Boly Inc. and Boly Holding Co. Ltd*



<http://www.bolymedia.com/index/Support>